




TVR 290 S WIRING SUPPLEMENT  
FUEL INJECTION & ELECTRONIC  
SPEEDOMETER

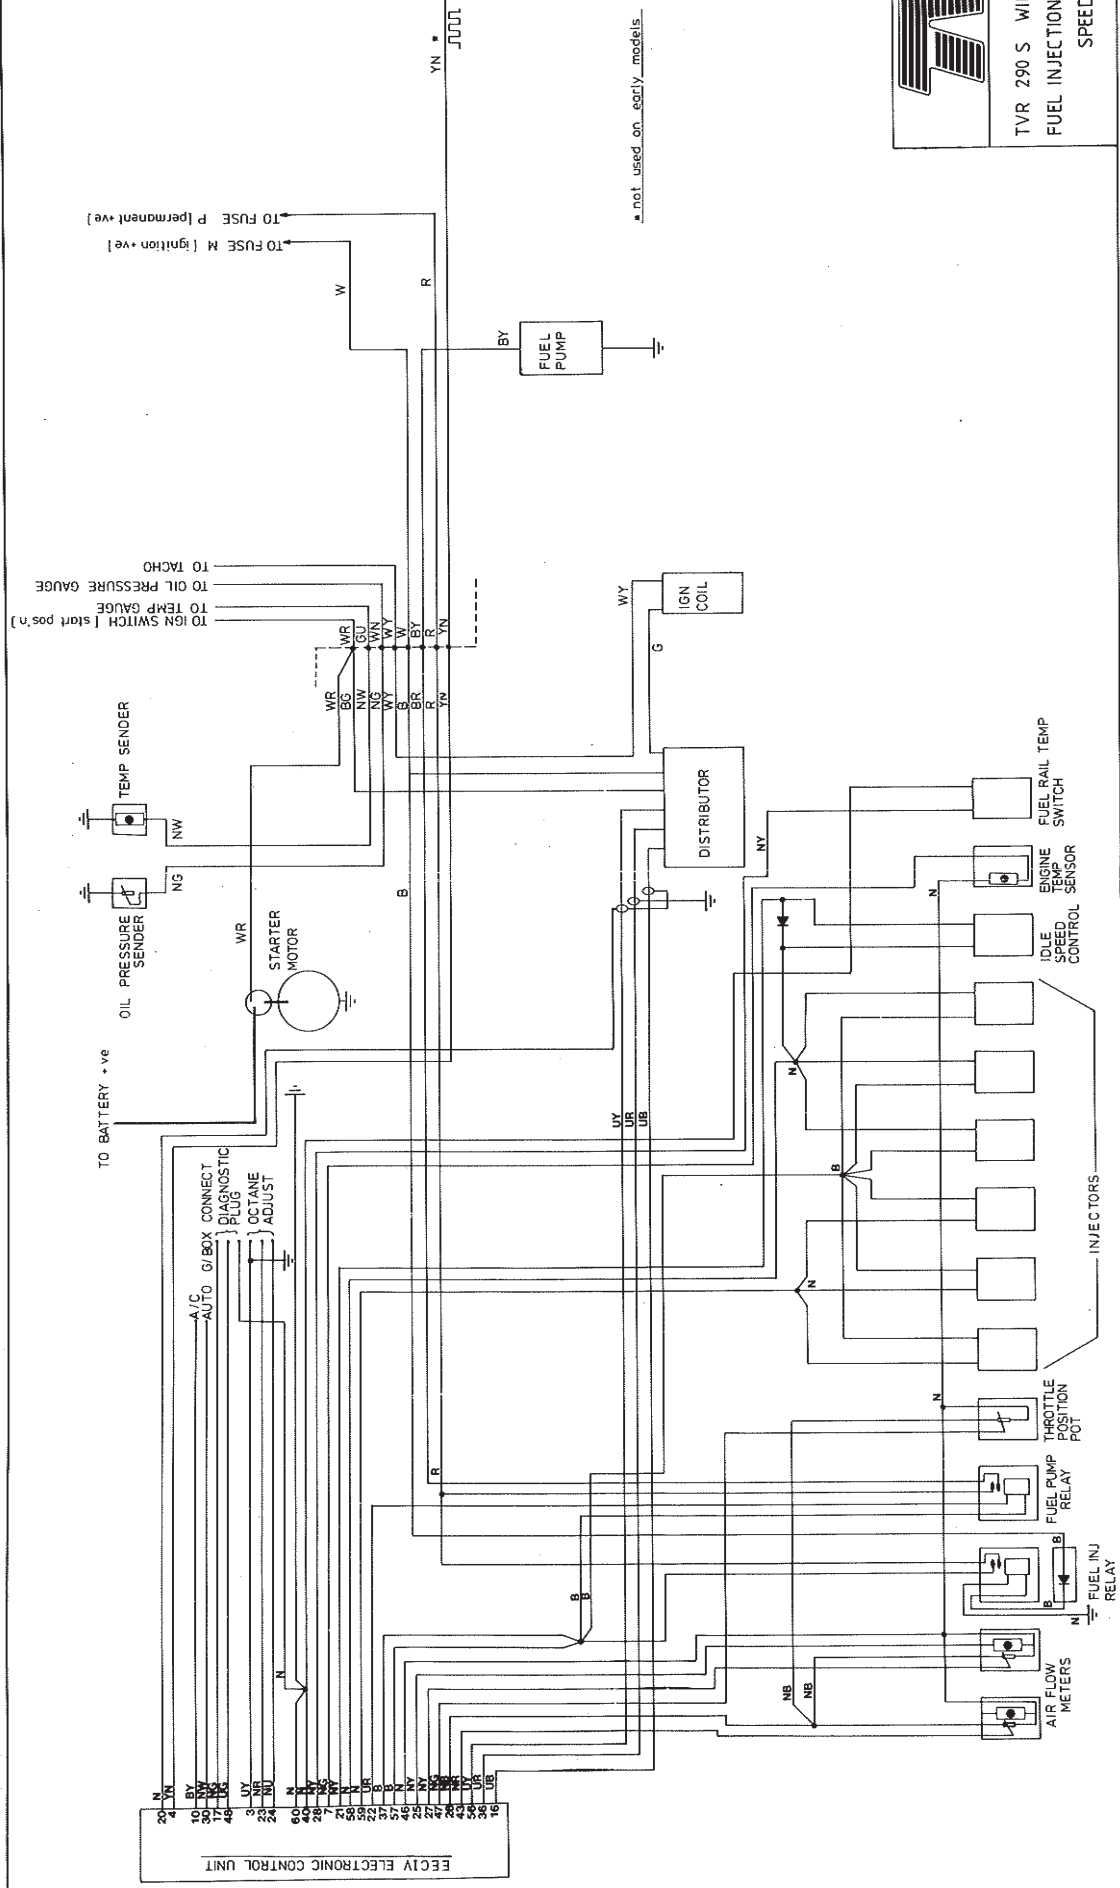

TO BATTERY +ve

OIL PRESSURE SENDER

TEMP SENDER

STARTER MOTOR

IGN SWITCH (start pos'n)

TO TEMP GAUGE

TO OIL PRESSURE GAUGE

TO TACHO

TO FUSE M (Ignition +ve)

TO FUSE P (Permanent +ve)

\* not used on early models

TO INSTRUMENT IGNITION SUPPLY FUSE J

ELECTRONIC CONTROL UNIT